



Barrier Free Architecturals
 480 E Franklin Rd, #108, Meridian, ID 83646
 1(877) 717-7027 or visit: www.barrierfree.org
 EMAIL: info@barrierfree.org

Specifications

Installation Instructions

Flange Trim Kit

KFTK125 & KXFTK125

Application

For use as an easy way of covering the nailing flange where there already is drywall or other wall material BEHIND the shower or tubshower.

Installation

Measure the distance between the drywall at the back wall. Trim the sections to size with a hacksaw or sandpaper. Use the Power Grab adhesive to create mounds approximately 3/4" tall on the nailing flange and drywall at 8" intervals. Press the trim in place. Repeat with the remaining sections. Caulk around all edges with both 100% silicone and latex caulk as shown below.

Kit consists of

- 1 ea Backwall section
- 1 ea Left front and top section
- 1 ea Right front and top section
- 1 ea Power Grab Construction Adhesive
- 1 ea 100% Silicone


Part Numbers

- KFTK125 for 0"-83"
- KXFTK125 for 83"-94-3/4"


Material

Matching gelcoat fiberglass


Install with Power Grab and caulk

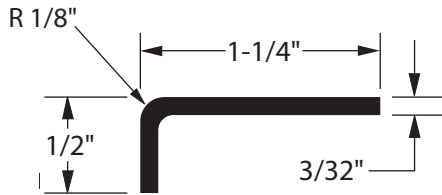

Cross Section of Trim

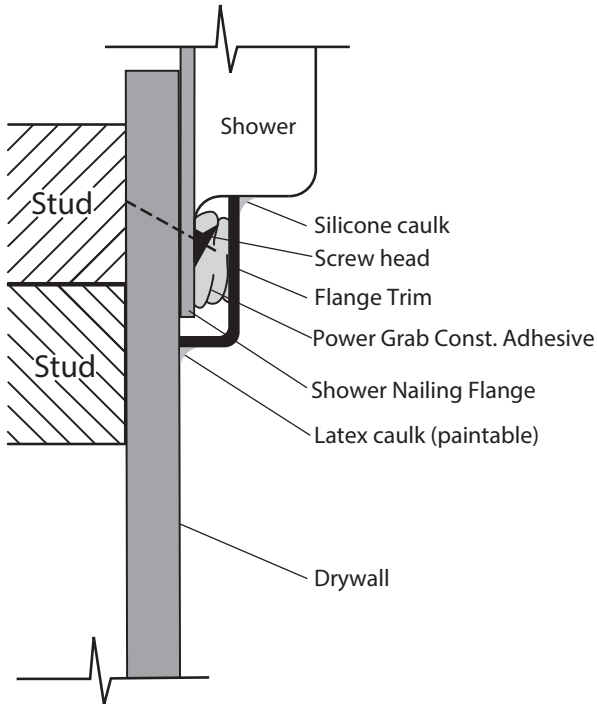

Cross Section of Trim installed

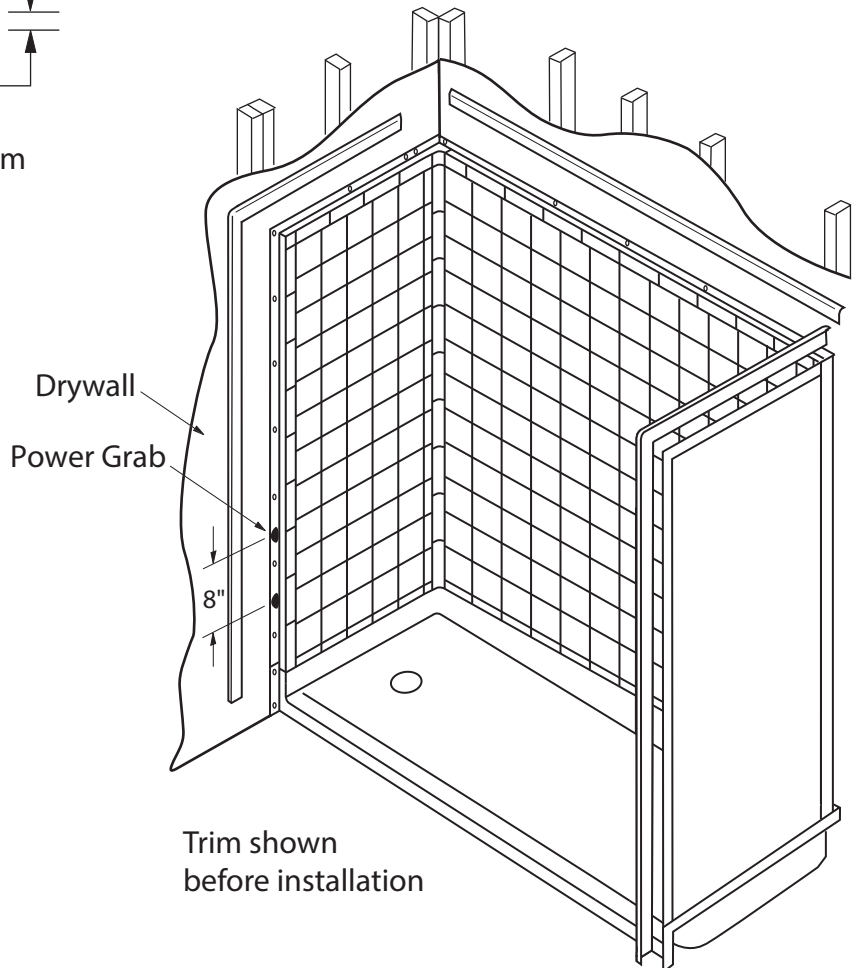

Trim shown before installation