



Barrier Free Architecturals
 480 E Franklin Rd, #108, Meridian, ID 83646
 1(877) 717-7027 or visit: www.barrierfree.org
 EMAIL: info@barrierfree.org

Specifications

Installation Instructions

Flange Trim Kit

KFTKR3, KXFTKR3 & KFTKTR3

Application

For use on remodel where either (Fig. A) the drywall is cut out to install the shower or (Fig. B) the drywall is damaged past the point where the shower with our narrower (1-1/4") molding #FTK-125 would not cover it.

Installation

Measure the distance between the drywall at the back wall. Trim the sections to size with a hacksaw or sandpaper. Use the Power Grab adhesive to create mounds approximately 3/4" tall on the nailing flange and drywall at 8" intervals. Press the trim in place. Repeat with the remaining sections. Clear away any excess adhesive, and caulk around all edges with both 100% silicone and latex caulk as shown below.

Material


Matching gelcoat fiberglass
 Install with Power Grab and caulk

Kit consists of

- | | |
|--------------------------|---------------------------------------|
| 1 ea Backwall section | 1 ea Right top section |
| 1 ea Left front section | 2 ea Power Grab Construction Adhesive |
| 1 ea Left top section | 1 ea 100% Silicone caulk |
| 1 ea Right front section | |

Also needed
 Latex Caulk (not included)

Part Numbers
 KFTKR3 for 42"-83"
 KXFTKR3 for 83"-88"
 KFTKTR3 for 15"-42"

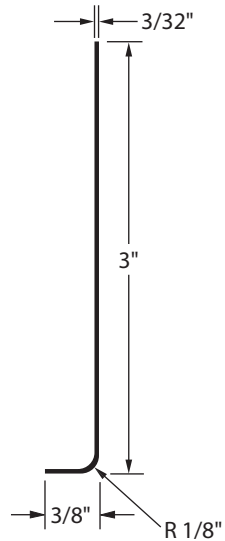

Cross Section of Trim

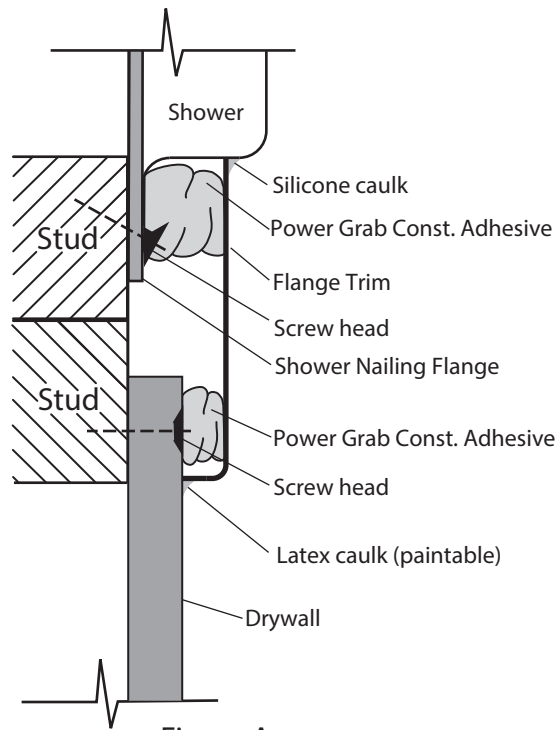
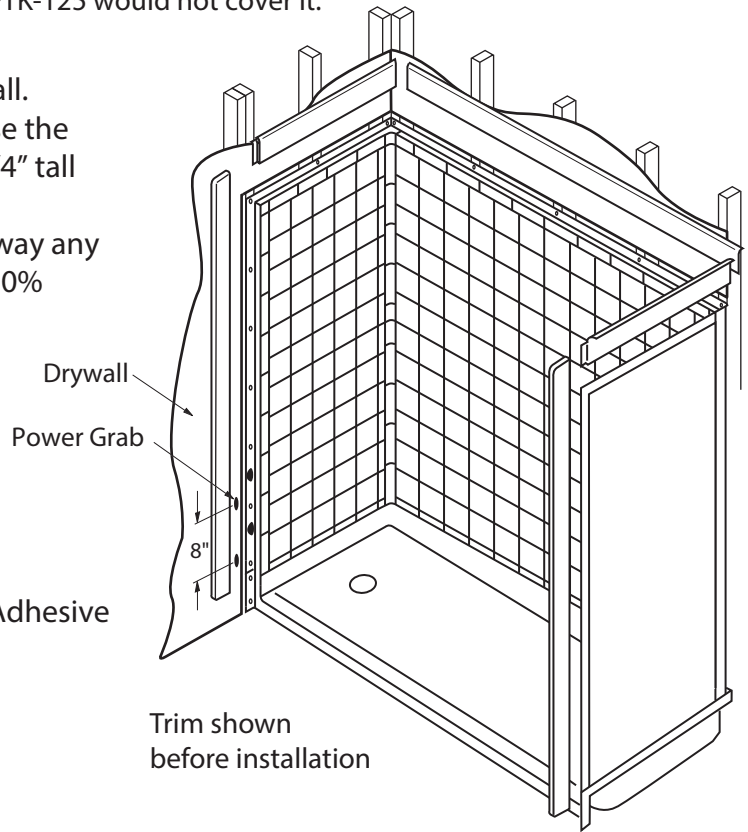


Figure A
 Typical Cross Section of Trim installed

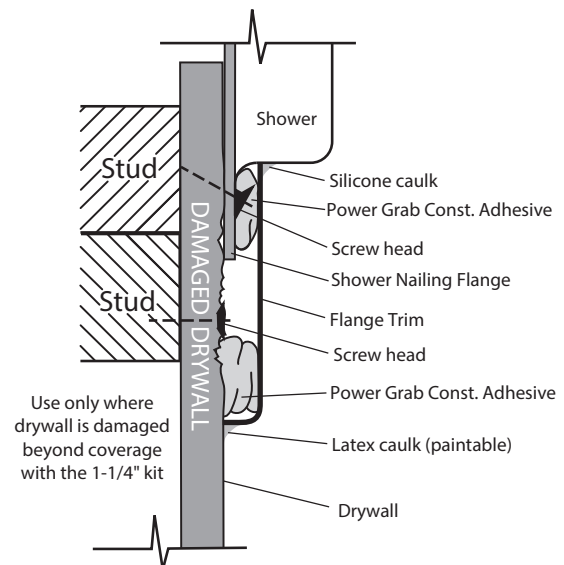


Figure B
 Non-Typical Cross Section of Trim installed with shower over damaged drywall