



BARRIER FREE
ARCHITECTURALS INC.




Architectural Products for Barrier Free Living

www.barrierfree.org

(877) 717-7027


Installation Instructions

Window Trim Kit WTK37 and WTK37H (WITH HEADER)

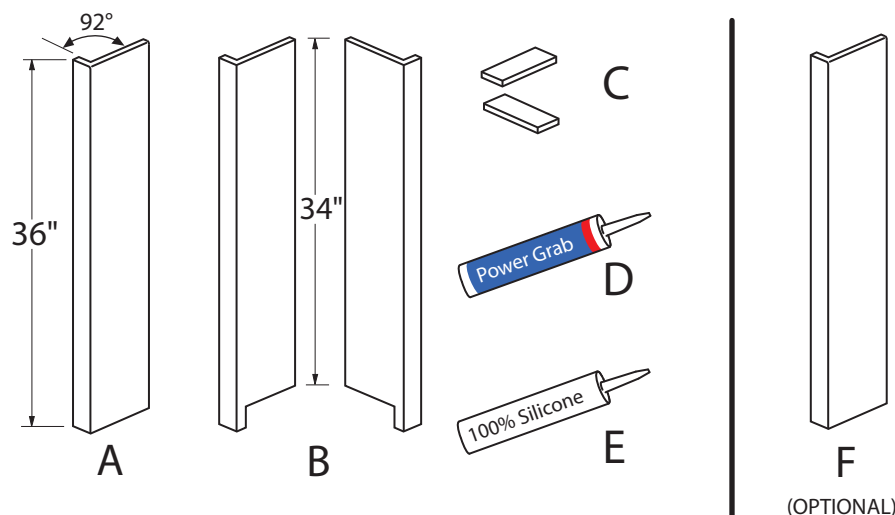


Window Trim Kit contents:

- A 1 ea 36" long Sill Piece (92° for drain-off) Radii on Left end
- B 2 ea 36" long Side pieces (90°)
- C 2 ea Top Trim Pieces (not included with Header kit)
- D 1 ea Tube of Power Grab construction adhesive
- E 1 ea Tube of white 100 % silicone
- F OPTIONAL HEADER 1 ea 36" long Sill Piece (90°)
- G (WITH HEADER ONLY) 4 ea #8 x 1-1/2" Header mounting screws

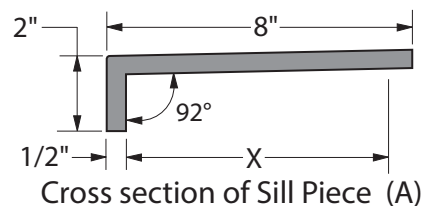


Cross section of Sill Piece (A)

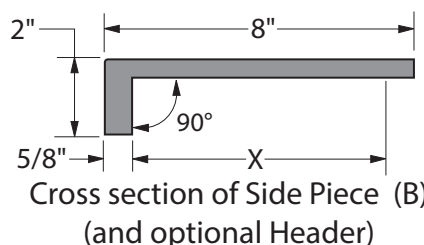

Cross section of Side Piece (B)
(and optional Header)


Material:

1/2" thick cast polyester with
matching gelcoat finish

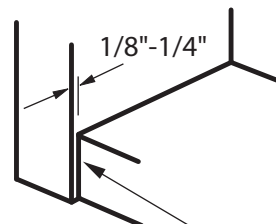

Cut Side piece 1/8"-1/4" wider
for cleaner caulking into corners


Installation:

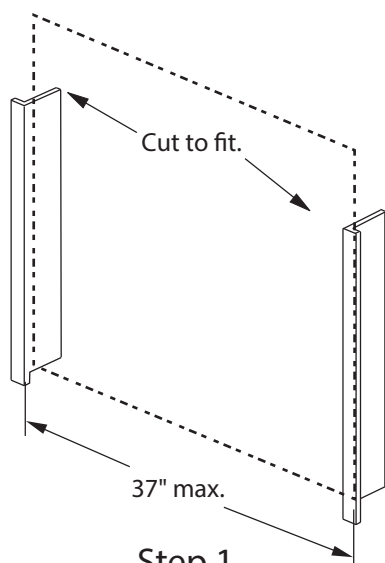

Step 1


Cut* Side Pieces (B) to length and width and install with Power Grab. Brace or tape as needed until the Power Grab hardens.

*Cut with a jig saw with bi-metal blade where edge chipping will not be covered with silicone or otherwise with a power saw.

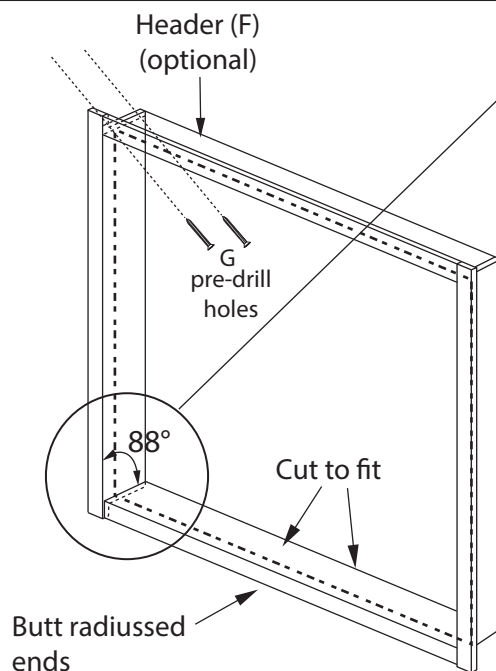

Step 2

Cut Sill Pieces (A) to length and width (cut slightly narrower than side pieces) and install TIPPED FORWARD approx. 2 degrees or 1/16" - 1/8" for water run-off.

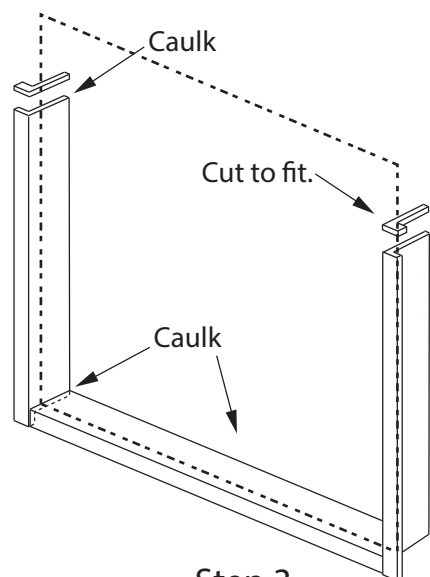

Step 3

Cut Top Trim Pieces (C) to fit and install.

Step 4

Caulk all joints and corners.



BARRIER FREE
ARCHITECTURALS INC.




Architectural Products for Barrier Free Living

www.barrierfree.org

(877) 717-7027



Installation Instructions

Window Trim Kit WTK73 and WTK73H (WITH HEADER)

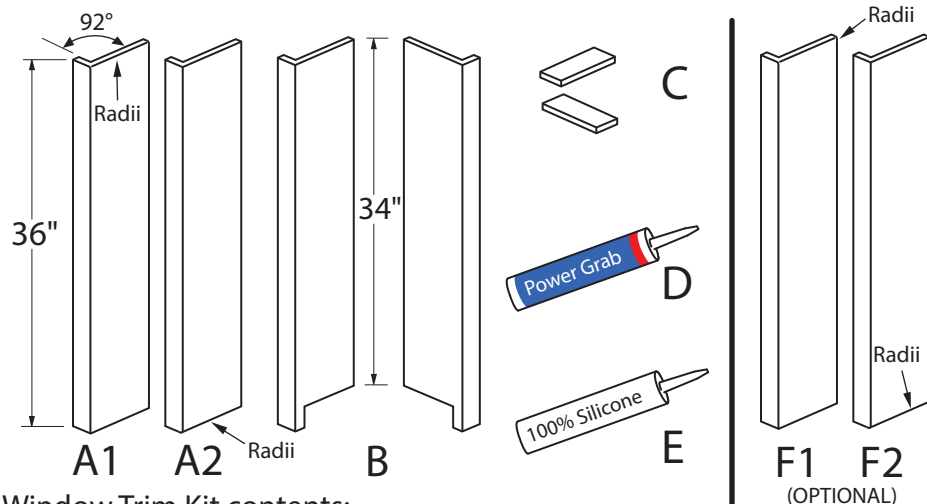


Window Trim Kit contents:

- A1 1 ea 36" long Sill Piece (92° for drain-off) Radii on Left end
- A2 1 ea 36" long Sill Piece (92° for drain-off) Radii on Right end
- B 2 ea 36" long Side pieces (90°)
- C 2 ea Top Trim Pieces (not included with Header kit)
- D 1 ea Tube of Power Grab construction adhesive
- E 1 ea Tube of white 100 % silicone
- F1 OPTIONAL HEADER 1 ea 36" long Sill Piece (90°) Radii on Left end
- F2 OPTIONAL HEADER 1 ea 36" long Sill Piece (90°) Radii on Right end
- G (WITH HEADER ONLY) 4 ea #8 x 1-1/2" Header mounting screws
- H (WITH HEADER ONLY) 4 ea #8 x 1/2" screws with Header connecting strip

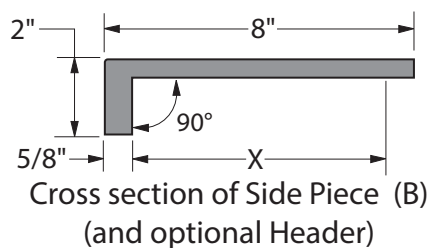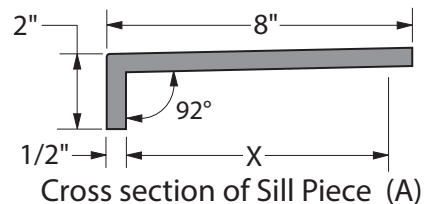


Material:

1/2" thick cast polyester with matching gelcoat finish

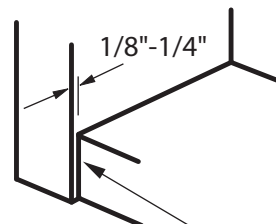

Cut Side piece 1/8"-1/4" wider for cleaner caulking into corners


Installation:

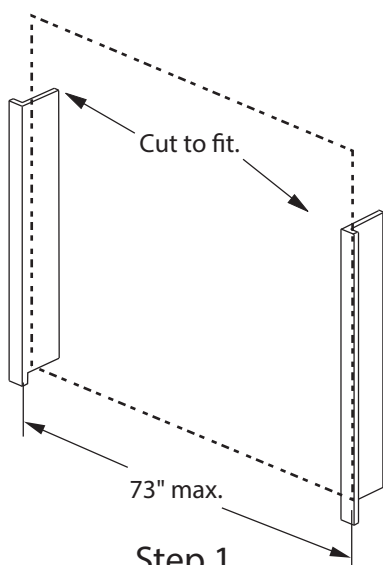

Step 1


Cut* Side Pieces (B) to length and width and install with Power Grab. Brace or tape as needed until the Power Grab hardens.

*Cut with a jig saw with bi-metal blade where edge chipping will not be covered with silicone or otherwise with a power saw.

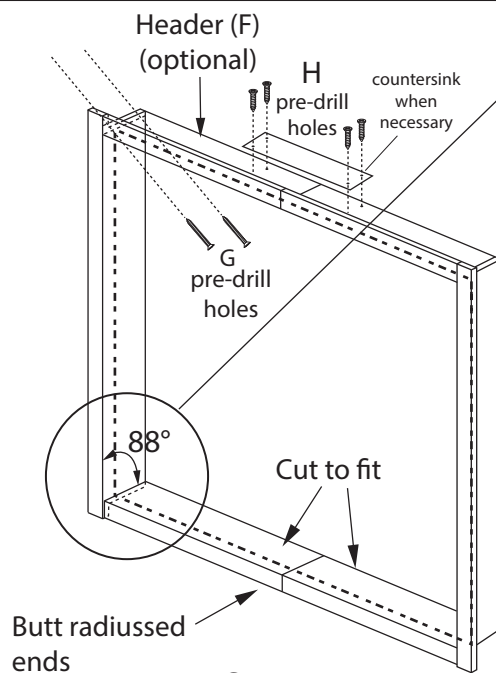

Step 2

Butt radiussed ends
Cut Sill Pieces (A) to length and width (cut slightly narrower than side pieces) and install TIPPED FORWARD approx. 2 degrees or 1/16" - 1/8" for water run-off.

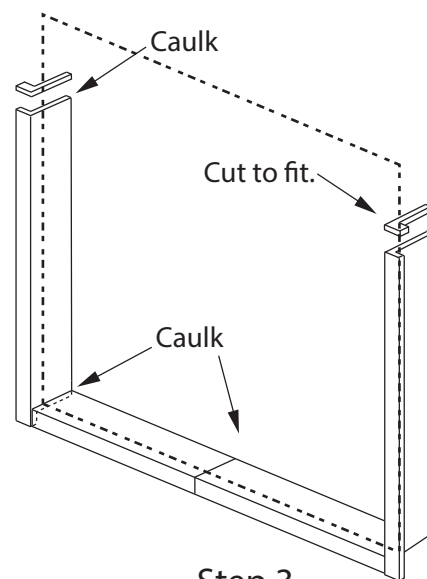

Step 3

Cut Top Trim Pieces (C) to fit and install.

Step 4

Caulk all joints and corners.